



## Book Descriptions:

# Dv220Sl8 Manual

Multi Angle, Skip, Pause and Resume Play. Program Play, Random Play CD. Zoom 2x, 4x Virtual Surround System. Dolby Digital Stream Out SYNC Recording to STB Output. Power Off Through from Linein to Lineout. Please read before using this unit. If you need additional operating assistance after Contents Symbols Used in This Manual. 4. Maintenance. 4. About Cassette Tapes and Discs. 5. Playable Media. 5. Unplayable Discs. 5. Playback. 15. MP3 Playback. 16. OnScreen Display. 16. Search Functions. 17. Using Track Search. 17. Using Time Search. 17. Marker Setting. 17. Repeat Playback. 18. Repeat AB Playback. 18. Random Playback. 18. Programmed Playback. 18. Special Settings. 19. Subtitle Language. 19. Audio Language. 19. Camera Angles. 19. Black Level Setting. 19. Stereo Sound Mode. 19. Virtual Surround. 19. DVD Setting. 20. LANGUAGE Setting. 20. DISPLAY Setting. 21. AUDIO Setting. 21. PARENTAL Setting. 22. OTHERS Setting. 22. Reset to the Default Setting Except for PARENTAL Setting. 23. Connection to a TV. 6. Connection to an Audio System. 7. Preparation for Use. 8. Turning on Unit for the First Time. 8. Clock Setting. 8. Function Overview. 9. Front Panel Indicator Lights. 9. Selecting DVD or VCR Operation. 9. Remote Control. 10. Installing the Batteries for the Remote Control. 10. Other Operations. 11. Index Search. 11. Time Search. 11. Auto Repeat. 12. Recording. 12. Timer Recording. 12. Satellite Link. 14. Copying a Cassette Tape. 14. Specifications. 24. Language Code List. 24. The model and serial numbers of this unit may be found on the cabinet. You should record and retain those numbers for future reference. Model No. Serial No. Keep these instructions. Heed all warnings. Follow all instructions. Do not use this apparatus near water. Clean only with dry cloth. Do not block any ventilation openings. <http://annestorrs.com/userfiles/delagua-water-testing-kit-manual.xml>

- **dv220sl8 manual, sylvania model dv220sl8 manual, sylvania dv220sl8 manual, dv220sl8 manual.**

Install in a grounding type plug When a cart is used, use caution when servicing is required when the apparatus has been changed or modifications to this equipment may cause the user could lose the authority to this equipment generates, uses, and can radiate radio frequency energy and, if not installed, if this equipment does cause harmful interference. This Class B digital apparatus complies with Canadian ICES 003. Disconnect the mains plug to shut off when find trouble or not in use. The mains plug shall remain readily operable. Only a qualified service person should remove the cover or attempt to service this. CAUTION Use of controls or adjustments or performance of procedures other than those specified herein may result in fire, explosion, or other hazards. CAUTION Visible and invisible laser radiation when open and interlocks defeated. Do not stare into beam. LOCATION Inside, near the deck mechanism. This product Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and reverse engineering or disassembly is not permitted. Replace only with the same or equivalent type. WARNING Batteries Battery pack or battery installed shall not be exposed to excessive heat such as sunshine, fire, or the like. Do not place the unit on the furniture that is capable of being tilted by a child and an adult leaning, pulling, standing. To Avoid the Hazards of Electrical Shock and Fire. Grasp it by the plug. Location and Handling. Do not place anything directly on top or bottom of the unit. In this case, please ensure enough space between the external devices and the unit. This is not a malfunction. Dew Condensation Warning. If so, do not use this unit at least for a few days. Note about Recycling. Please dispose of any materials in accordance with local regulations. Notice for Progressive Scan Output In case of picture problems with 525/480 progressive scan output. If there are questions, please refer to the NEC that provides guidelines for proper grounding. TV program reception is clear. <http://creaorganization.com/depo/sayfaresim/deland-s-automatic-playing-cards-manual.xml>

Dirt accumulated on the videoIf a streaky or snowyNoteSymbols Used in This Manual. The following symbols appear in some headings in this manual.Maintenance. All rights reserved. No part of this manual may be reproduced, copied,Furthermore, any unauthorized commercialServicingTurn off, unplug the power plug, and please call our toll freeInformation in this document is subject to change without notice. Funai reserves the right to change the content herein without theDo not spray insecticide liquid near the unit. Such chemicals mayElectric Co., Ltd and may not be used in any way without the expressAll other trademarks used herein remainNothing containedFunai shall aggressively enforce its intellectualCleaning Discs. SYLVANIA is a registered trademark of OSRAM SYLVANIA Inc., usedCleaning the CabinetDo not wipe in a circular motion.Cleaning the Disc Lens. Manufactured under license from. Dolby Laboratories. "Dolby" and theLaboratories.Guide" in this manual, the laser optical pickup unit may be dirty. Consult your dealer or an authorized service center for inspectionDisc HandlingType ofMark logoDVDvideo. RecordedMedia size. Tape speed and disc typesRegion codeIf you cannot play back a disc which bears one of the marks above, check the following. This unit conforms to the NTSC color system. Discs recorded in other color systems such as PAL cannot be played back. Certain DVDvideo does not operate as described in this manual due to the intentions of the disc's producers. Scratched or stained discs may not be played back. Some discs cannot be played back because of incompatible recording conditions, characteristics of the recorder or special properties of discs. You can play back discs which bear the marks above. If you use nonstandardized discs, this unit may not play them back. Even ifHowever, dependingRefer to the manual accompanying the DVD recorder. Only discs recorded in the video format and finalized can be played back. Unfinalized discs cannot be played back.

Depending on the recording status of a disc, the disc may not be played back at all theDo not glue paper or put stickers on to the disc. These may damage the disc, and the unit may not read it correctly. Discs recorded in the VR video recording format cannot be played back. Unplayable Discs. NEVER play the following discs as malfunction may result! DVDRAM, DVDaudio, CDi, photo CD, video CD, DVD with region codes other than 1 or ALL, DTSCD, DVDRAM for personal computers. CDROM for personal computers. On the following disc, the sound MAY NOT be heard.Note. The sound recorded on the high density super audio CD layer cannot be delivered. Any other discs without compatibility indicationsConnection to a TV. Please refer to "Basic TV Connection" on the front page before you use this unit. VCR and Basic DVD Connection. Available for DVD only. DVD's picture qualityRCA video cable. Svideo cableThis unitPlease purchase the rest of the necessary cables at your local store. Note. If your TV is compatible with 525 480 progressive scanning, and you want to enjoy that high quality picture for DVD playing. You must select the connection COMPONENT VIDEO OUT above and progressive scanning mode. To set the mode, setRefer to pages 2021 forIf your TV is not compatible with progressive scanning;After connecting to your TV. You will need to switch to video input on your TV. Please refer to your TV's owner's manual for details. Input modes for common TV brands. Listed below are inputs for common brand name TV's. Admiral. Curtis MathisLXI Series. MagnavoxSanyo. Sharp. Sony. Toshiba. ZenithPlaying 2 Channel Analog Audio. Playing Multi Channel Digital AudioRCA audio cableMD deck or DAT deckAudioPlease purchase the rest of the necessary cables at yourSetting. ConnectionEven if the unit is turned off, the signalL1 Rear panel terminals. L2 Front panel terminalsPlease purchase the rest of the necessary cables at yourNoteDo not change channels during a recording.

You cannot recordPreparation for Use. Turning on Unit for the First Time. Clock Setting. Please note most instructions in this manual refer to remote control use.See your TV manual forSelect the current month.Select the current day.Select the current hour.Front Panel Indicator Lights. Lights up when the progressive scan system is activated. Lights up during a recording or onetouch timerLights up when the inserted discBlinks when an unplayable discLights up when this unitLights up when the timer recording orSelecting DVD or VCR Operation. You must first select either DVD or VCR

operation. DVD button VCR OUTPUT light Connect an audio cable from here to the audio input jack of your television. Connect a monaural audio cable from the audio output jack of your Select "L1" to activate the rear. AUDIO IN jack, or "L2" to activate the front. Connect a video cable from the video output jack of your camcorder, VCR, Connect component video cables from here to the component video Connect an Svideo cable from here to the Svideo input jack of your Connect a digital audio coaxial cable from here to the digital audio input Note. You can enhance your DVD picture and sound quality with an Svideo DVD mode. VCR mode. Media Install the batteries AA x 2 matching This will prevent battery acid from leaking Before Turn on the TV. To play back in slow motion slow mode. SLP mode only To freeze the picture on TV screen during playback still mode To rewind the cassette tape automatically auto rewind. When a cassette tape reaches its end during playback, fast forward or recording except timer recording and one touch To Reset the Cassette Tape Counter counter reset. Note Time Search. Index Search. To search by index mark. The index mark will be made automatically at the beginning of each recording. To search by length of time. Pro.1 Pro.2 Pro.3 Pro.4 Pro.5 To rewind To fast forward Auto Repeat. When "AUTO REPEAT" is set to "ON", the cassette tape will automatically rewind and start over when it reaches the end.

This will continue until auto repeat function is turned off. Recording. This unit has no tuner system so it cannot receive TV broadcasts without external Note Select "L1" to activate rear input jacks. Select "L2" to activate front input jacks. Type of tape SP mode. SLP mode You CANNOT watch one channel and record another at the same time. Connect camcorders and other such devices to the L2 front panel Accidental Erasure Prevention You CANNOT dub a DVD to a video cassette tape. Timer Recording Then continue with step 2. Select the desired date. Note. Select the desired starting time hour. Select "L2" to activate front input To check, correct or cancel a timer program After an one touch timer recording or a timer recording has been set, this unit operates as follows When an one touch timer recording or a timer recording is completed. DVD functions are available during one touch timer recording, timer standby mode and timer recording. In case timer recording is in. If you want to use the DVD player during a timer recording or while Note for timer recording You can set the unit to start recording whenever it detects a video signal from the external tuner. Preparing for the Satellite Link Timer Recording. Preparation on this unit. Preparation on the tuner Type of tape. SP mode. SLP mode Set the desired start minutes. To cancel the satellite link function while the satellite link Note Copying a Cassette Tape. Warning Unauthorized recordings of copyrighted cassette tapes L2. Choose L1 if device is connected to rear input jacks, or L2 Standard audio cables are not recommended. Before. Turn on the TV, amplifier and any other To start playback This happens while the 1st This is not a malfunction. Refer to page 20. To stop playback Some discs contain menus which allow you to customize DVD. Calling Up a Menu Screen during Playback Refer to the manual TV screen. Resume ON. Press PLAY to play from here. To play the beginning, Note Note Refer to pages 2021. Zoom Note Refer to pages 2021. Note MP3 Playback.

MP3 is a method of compressing files. When selecting the folder Folders and MP3 files are displayed respectively as. A maximum of 255 folders or 999 files may be recognized on one disc. Up to 8 hierarchies can be recognized in one folder. File in the 9th or This unit recommends files recorded under the following circum hierarchy except for the top hierarchy. On Screen Display A All Tracks repeat. A B AB repeat TTT Title PROGRAM or RANDOM will be displayed instead of 2. C Chapter repeat A B AB repeat G Group folder repeat. A Disc repeat Search function does not work during programmed or random playback. Using Time Search. Using Track Search Note Marker Setting This function allows you to assign a specific point on a disc to be To set a marker Current Title Note Refer to the manual accompanying the disc. Repeat Playback. Random Playback Repeat function is available only during playback. Programmed Playback Note Repeat function is available only during playback. Note However, your programmed Subtitle Language. Camera Angles You can change If the "ANGLE ICON" is set to "OFF" in "OTHERS" menu, OFF shows the original picture as

recorded. However, some discs have the Refer to page 24. LchRch However, some discs allow audio OFF no effects original sound Refer to "Stereo Sound Mode". DVD Setting You can select the "PLAYER MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" from "QUICK" menu quickly. P21 C Step 5 CUSTOM Menu. You can change the settings of the unit. SETUP menu Follow steps 1 to 3 in the "CUSTOM Menu" section above. LANGUAGE menu MENU", "TV ASPECT", "PROGRESSIVE" or "DOLBY DIGITAL" are Sets the audio language. Sets the subtitle language. Sets the language for DVD Sets the language for the Note Refer to the You can change the display functions. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20. See note on the right. Select the See note on the right. Note See note on the left. VIDEO OUT and SVIDEO OUT Note DIGITAL" are available.

"QUICK" You can make all settings in NOTE If there is no picture or picture is A ctivate P rogressi ve Confirm again to use progressive scan. TV screen. AUDIO Setting. Choose the appropriate audio setting for your device. It only affects during the playback of DVD discs. Follow steps 1 to 3 in the Set to "ON" to compress the range between soft and loud sounds. Set to "ON" when outputting in 48kHz. Set to "OFF" when outputting the original sound. DIGITAL" are available. "QUICK" You can make all settings in Set to "BITSTREAM" when the unit is connected to a Dolby Digital decoder. This function prevents unit from playing material inappropriate for children. Parental Levels. Parental level allows you to set the rating levels of your DVD software. Playback will stop if the ratings exceed the levels you set. Follow If you have set a password Note. Make sure this function works with To Change the Password for Parental Controls Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20. Enter current password. OTHERS Setting. You can change the other functions. Follow steps 1 to 3 in the "CUSTOM Menu" section on page 20. Set to "ON" to display Set to "ON" to turn this unit off automatically after 30 minutes of SETUP menu Initialize If this unit does not perform properly when operated as instructed in this manual. Refer to the following. Corrective action. This unit does not respond to the If necessary, remove all the obstacles between the sensor and the remote control. Turn up the volume, then if you hear some signal sound from The remote control is working if you confirm infrared light Change the position and direction of the unit. Cannot record a TV program. Timer recording is impossible. Cannot go into record mode. If needed, cover the hole with adhesive tape. Playback picture is partially noisy. Cannot view a picture but the Refer to "Auto Head Cleaning". No or poor, playback picture. Video or color fades in and out when No picture. Check if the DVD OUTPUT light will illuminate.

Then try other DVD features. Turn it on only if your TV has progressive scan and you are using the component video Disable progressive scan for all other connections. Refer to page 6. Disc cannot be played back. No sound. No DTS audio is output. Distorted picture. Refer to page 15. Refer to pages 2021. Audio or subtitle language does The camera angle cannot be Audio or subtitle language No power. Read the description in this manual for details on correct operations. Video heads English. Operating temperature Output signal format. Dimensions. NTSC color. Power source Weight. Power consumption. Approx 5.8 lbs 2.6 kg Language Code List. Code A far. Afrikaans. Albanian. Amharic. Arabic. Armenian. Assamese. Aymara. Azerbaijani. Bashkir. Basque. Bengali; Bangla. Bhutani. Bihari. Bislama. Breton. Burmese. Byelorussian Catalan. Corsican. Croatian. Esperanto. Estonian Fiji Code. Language. Code. Frisian. Galician. Georgian. Greenlandic. Guarani. Gujarati. Hausa. Hebrew. Hindi Interlingua. Interlingue. Inupiak. Javanese. Kannada. Kashmiri. Kazakh. Kinyarwanda. Kirghiz. Kirundi. Kurdish Latin. Latvian; Lettish. Lingala. Lithuanian Malagasy. Malay. Malayalam. Maltese. Maori. Marathi. Moldavian. Mongolian. Nauru. Nepali Oriya. Oromo Afan. Panjabi. Pashto; Pushto. Persian. Quechua. Rhaeto Romance Sangho. Sanskrit. Scots Gaelic. Serbian. SerboCroatian. Sesotho. Setswana. Shona. Sindhi. Singhalese Slovak. Somali. Sundanese. Swahili Tajik. Tamil. Tatar. Telugu. Thai. Tibetan. Tigrinya. Tonga.